
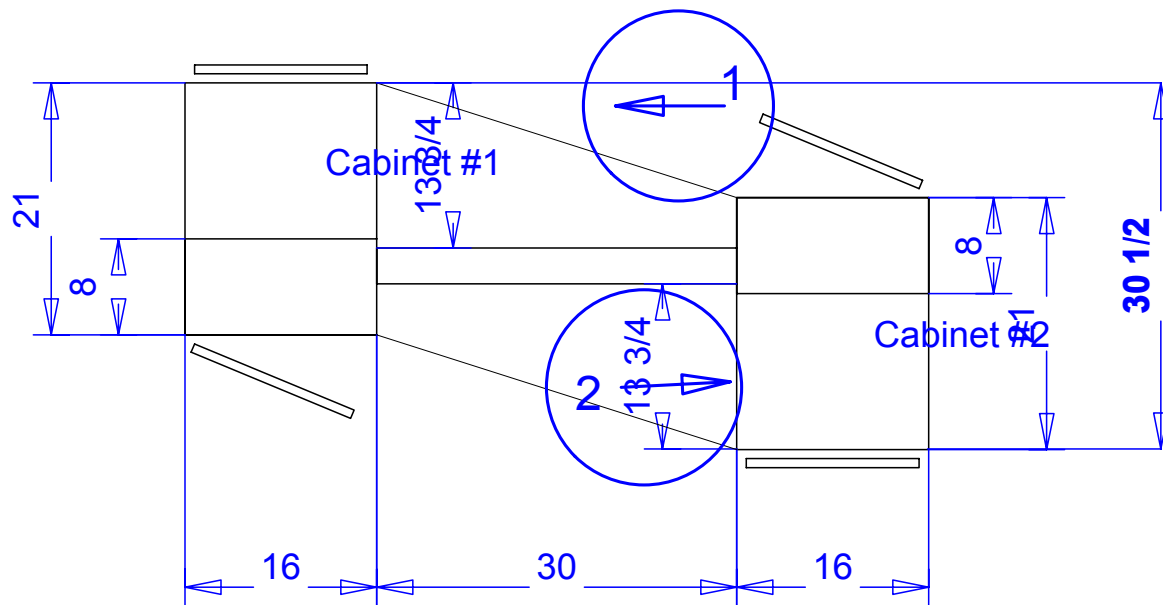


Set the bottom wall between the Cabinets
matching the numbers (1,1) and the holes.
Fasten together with 1 3/4" bolts

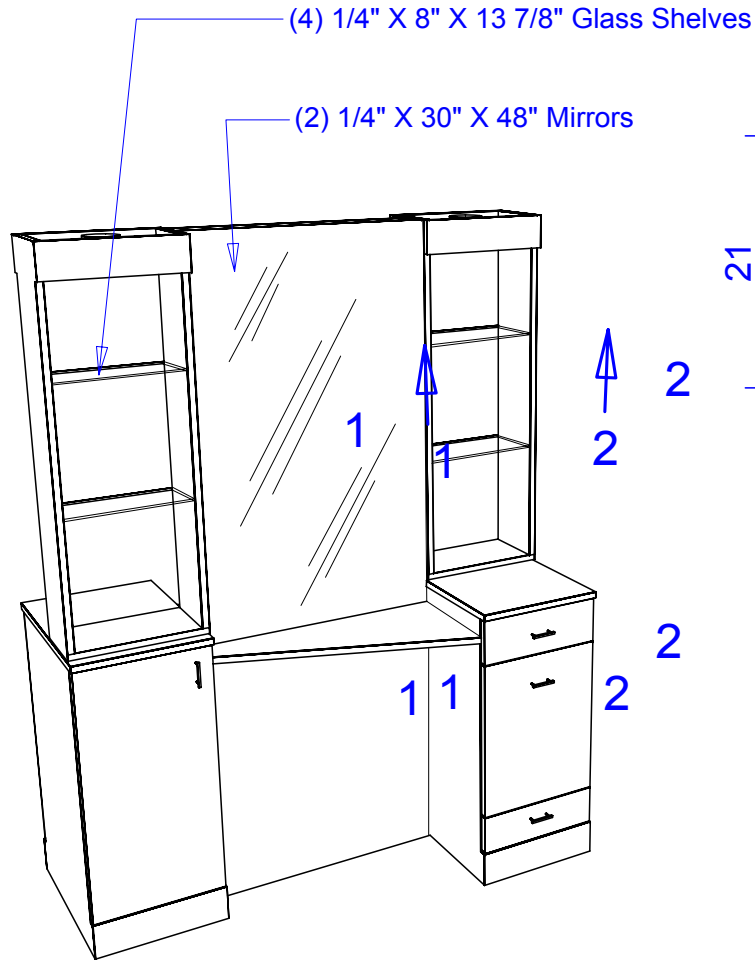

Set the upper mirror frame and displays
on the base and match the numbers

Use 1 1/4" screws to attach the frame
to the displays.

Install the Mirrors the the frame with
the included J-clips.

Quantity -1

Finish Schedule - 792-60-1
Face Color - Wild Cherry
Top Color - Wild Cherry
Toe Color - Wild Cherry
Pulls - Chrome Knobs
Interior - White
Other (Specify) -

Instructions for assembly

		Collins Manufacturing 809 E 20th Street Cookeville TN 38501	
Title: Salon Equipment International			
Size:	#. 48542-2		Drawn By: Steve
Date: 09/08/03			Sheet #. 5